


## How to connect 5V relay to 12V

If Usupply is stabil 12Vdc and not higher , you can use this

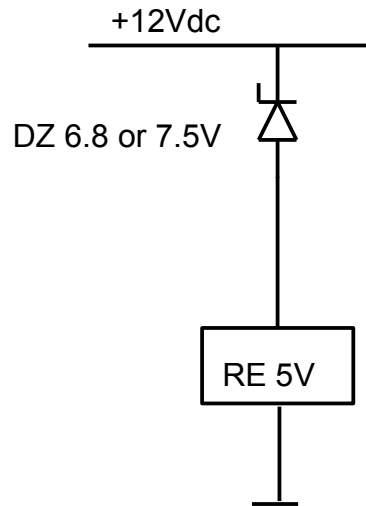

If Usupply can be higher as 12Vdc use this

