


0-30V Power supply

20 A

Wire : AWG 10 or 12 or 3G4

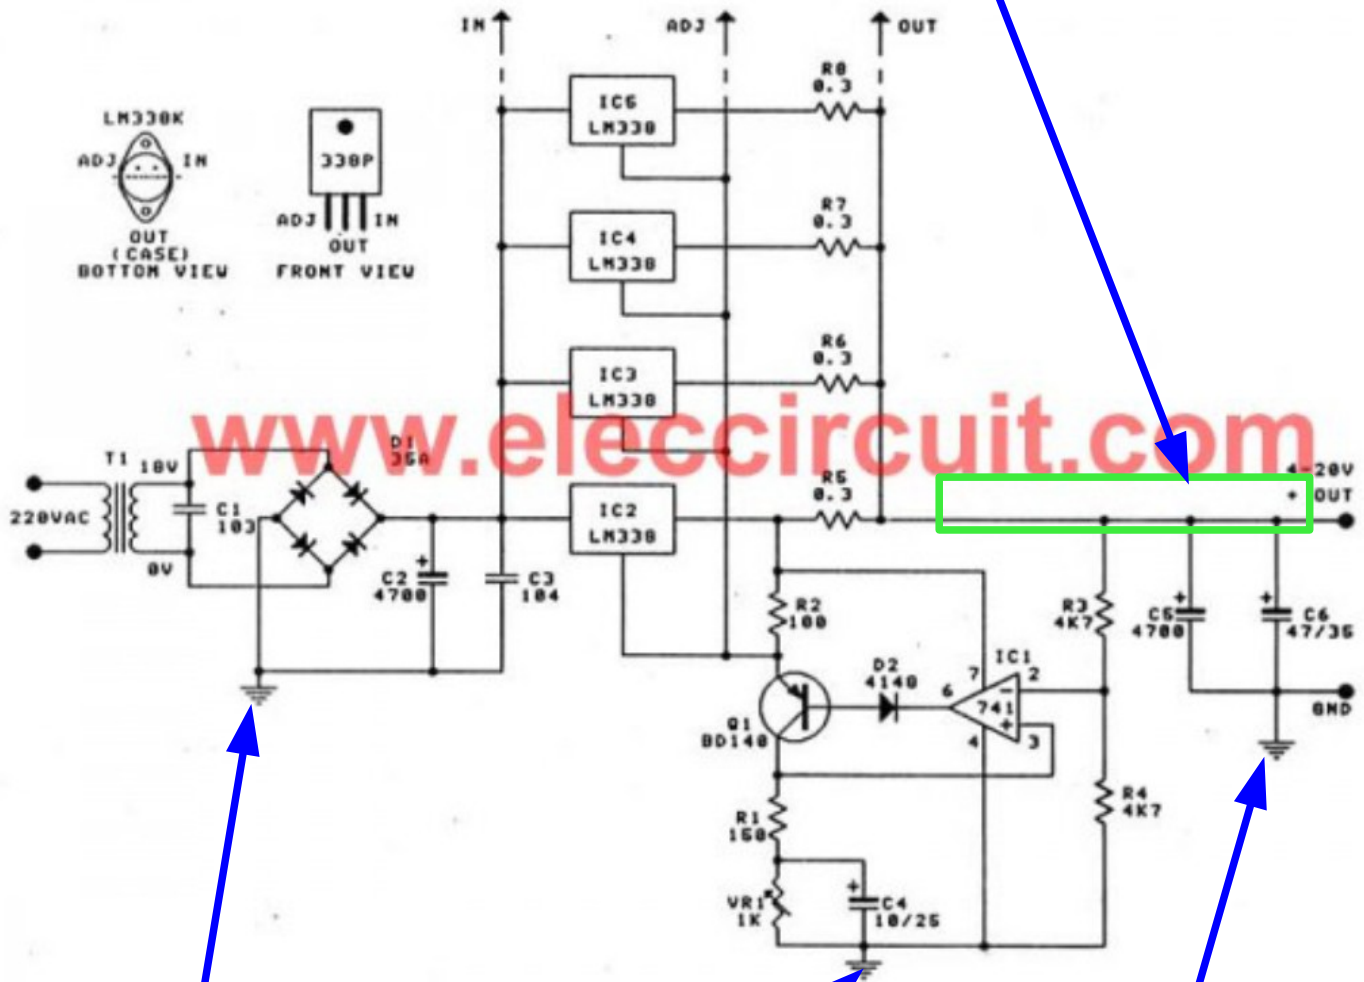

I only want to know how to link these ground paths :

- pcb trace ?
- AWG 10 or 12
- other ?