


# PUSH PULL SMPS

25vin

Add txfmr leakage

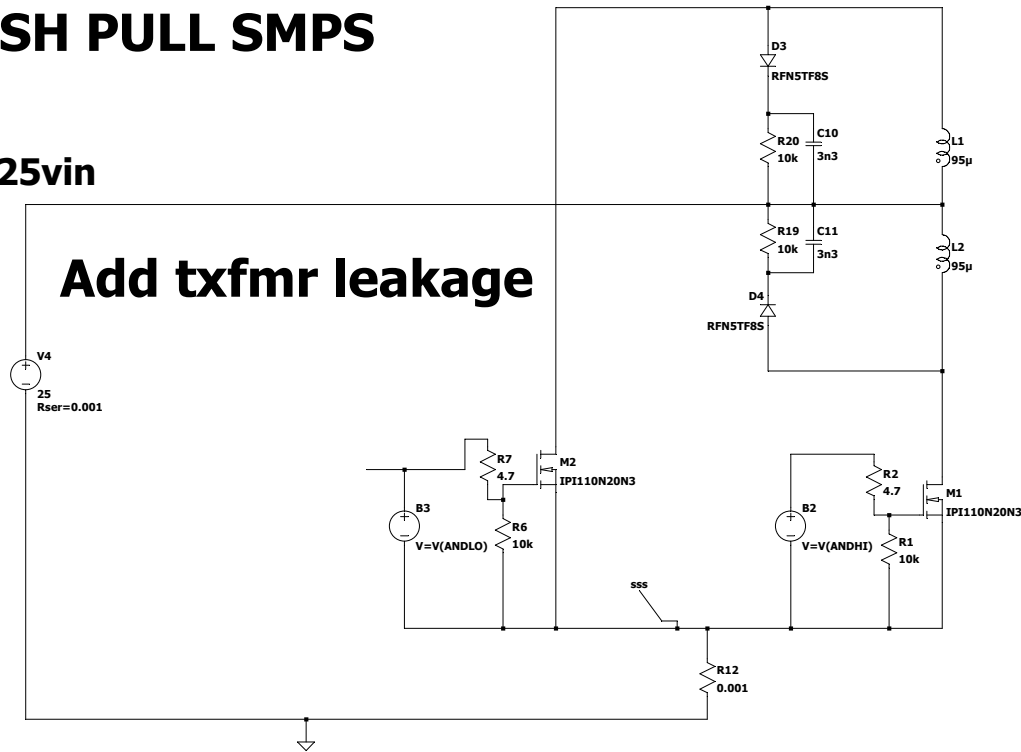

.ic v(vout) = 400v

400v,500w

