


Assembly Instruction:

MA_SMA-JWB2-1


Straight connector
for flexible cable

Cable entry:
Center conductor - soldered
Outer conductor - soldered


1) Prepare cable acc. to drawing.
If required: Braid tinned in tin bath.

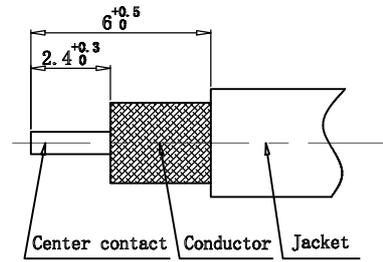

2) Solder the center conductor with cable
If required: After the soft-soldering clean
the outside with isopropylalcohol.99% clear.

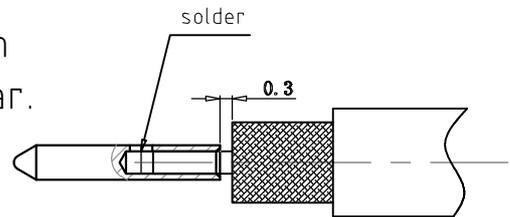

3) Insert the prepare cable into the
connector body
Solder the outer conductor with cable
If required: After the soft-soldering clean
the outside with isopropylalcohol.99% clear.

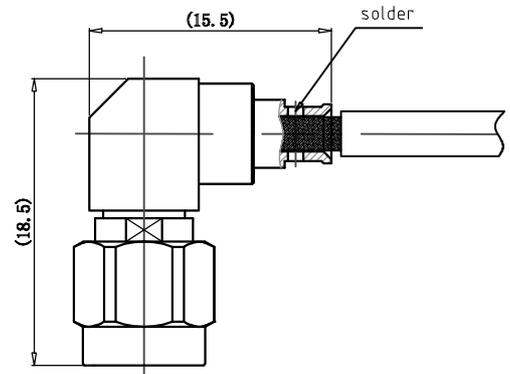

General tolerance:				Gwave			Part Number: SMA-JWB2-1		
X	±0.15	X°	±1°						
.X	±0.10	.X°	±0.5°						
.XX	±0.05	.XX°	±0.05°						
Designer		Date		Surface Area[mm ²]:			Part Name:		
Checker		Date		Phase marker	Weight	Scale	Drawing Number:		
Process		Date							
Approve		Date		Total	Page	Page	of		