



# **Bluetooth v4.0 Dual-Mode USB HCI Module**

## **Hardware Integration Guide (HIG)**

*Version 1.2*

**BT800**

**global solutions: local support™**

Americas: +1-800-492-2320 Option 2

Europe: +44-1628-858-940

Hong Kong: +852-2923-0610

[www.lairdtech.com/bluetooth](http://www.lairdtech.com/bluetooth)

## REVISION HISTORY

Revision	Date	Changes
Version 1.0	04 Sept 2013	Initial Release
Version 1.1	23 Sept 2013	Updated Regulatory/Certification section
Version 1.2	07 Oct 2013	Update BT SIG Approvals section Edited text in <i>Low-voltage VDD_RADIO Linear Regulator</i> section

## CONTENTS

Revision History.....	2
Contents .....	3
1 Scope.....	4
2 Operational Description.....	4
2.1 Features & Benefits.....	4
2.2 Application Areas .....	4
3 Block Diagram and Descriptions.....	5
4 Specifications .....	6
5 Pin Definitions .....	7
6 DC Electrical Characteristic .....	8
7 RF Characteristics .....	10
8 Interface.....	11
8.1 PIO.....	11
8.2 WLAN Coexistence Interface.....	11
8.3 USB Interface .....	11
8.4 PCM Interface .....	12
8.5 GCI Interface.....	14
8.6 Slots and Sample Formats.....	14
8.7 PCM Timing Information .....	15
8.8 PCM Slave Timing .....	17
8.9 PCM Slave Mode Timing Parameters.....	17
8.10 PCM_CLK and PCM_SYNC Generation .....	19
8.11 PCM Configuration .....	19
8.12 Digital Audio Interface (I <sup>2</sup> S).....	19
9 Power Control and Regulation .....	22
10 Antenna Performance.....	24
11 Mechanical Dimensions and Land Pattern .....	26
12 Implementation Note.....	27
12.1 PCB Layout on Host PCB.....	27
13 Application Note for Surface Mount Modules .....	29
14 FCC and IC Regulatory .....	31
15 European Union Regulatory .....	34
16 EU Declarations of Conformity.....	34
17 Ordering Information.....	35
18 Bluetooth SIG Approvals.....	36

## 1 SCOPE

This document describes key hardware aspects of the Laird BT800 Bluetooth HCI/HID module. This document is intended to assist device manufacturers and related parties with the integration of this module into their host devices. Data in this document are drawn from a number of sources including data sheets for the CSR8510.

Because the BT800 is currently in development stage, this document is preliminary and the information in this document is subject to change. Please contact Laird Technologies or visit the Laird website at [www.Lairdtech.com](http://www.Lairdtech.com) to obtain the most recent version of this document.

## 2 OPERATIONAL DESCRIPTION

The BT800 series of USB HCI devices are designed to meet the needs of OEMs adding robust Bluetooth connectivity and using embedded Bluetooth stacks within these products.

Leveraging the market-leading CSR8510 chipset, the BT800 series provides exceptionally low power consumption with outstanding range. Supporting the latest Bluetooth v4.0 Specification with EDR (Enhanced Data Rate), the Laird BT800 series enables OEMs to accelerate their development time for leveraging either Classic Bluetooth or Bluetooth Low



Figure 1: BT800 module

Energy (BLE) into their operating system based devices.

With a tiny footprint as small as 8.5 x 13 mm, yet output power at 8 dBm, these modules are ideal for applications where designers need high performance in minimal size. For maximum flexibility in systems integration, the modules are designed to support a full speed USB interface plus GPIO and additionally I2S and PCM audio



Figure 2: BT820 USB dongle

interfaces. These modules present an HCI interface and have native support for Windows and Linux Bluetooth software stacks. All BT800 series devices are fully qualified as Bluetooth Controller Subsystem products. This also allows designers to integrate their existing pre-approved Bluetooth Host and Profile subsystem stacks to gain a Bluetooth END product approval for their products.

The BT800 series is engineered to provide excellent RF performance with integrated antenna and additional band pass filters. It further reduces regulatory and testing requirements for OEMs and ensures a hassle free development cycle. As an additional benefit of the BT800 series, Laird has implemented CSR's HID (Human Interface Device) Proxy Mode enabling out of the box HID connectivity for pointing devices and / or keyboard functionality, requiring zero host device software or configuration.

A fully featured, low-cost developer's kit is available for prototyping, debug, and integration testing of the BT800 series modules and further reduces risk and time in development cycles.

### 2.1 Features & Benefits



- Bluetooth v4.0 - Dual mode (Classic Bluetooth and BLE)
- Compact footprint
- 2-wire and 3-wire Wi-Fi coexistence scheme
- High antenna radiation gain and efficiency
- Good interference rejection for multi-com system (GSM/WCDMA)
- Class 1 output – 8 dBm
- USB, GPIO, I2S, and PCM
- Industrial Temperature Range
- 64 k EEPROM support for HID Proxy mode

### 2.2 Application Areas

- Medical devices
- ePOS terminals
- Barcode scanners
- Industrial Cable Replacement
- M2M Connectivity
- Automotive Diagnostic Equipment
- Personal Digital Assistants (PDA)
- Bluetooth HID device (keyboard, mouse, and joystick)

- Bluetooth Controller subsystem
- FCC, IC, CE, and MIC approvals

## 3 BLOCK DIAGRAM AND DESCRIPTIONS

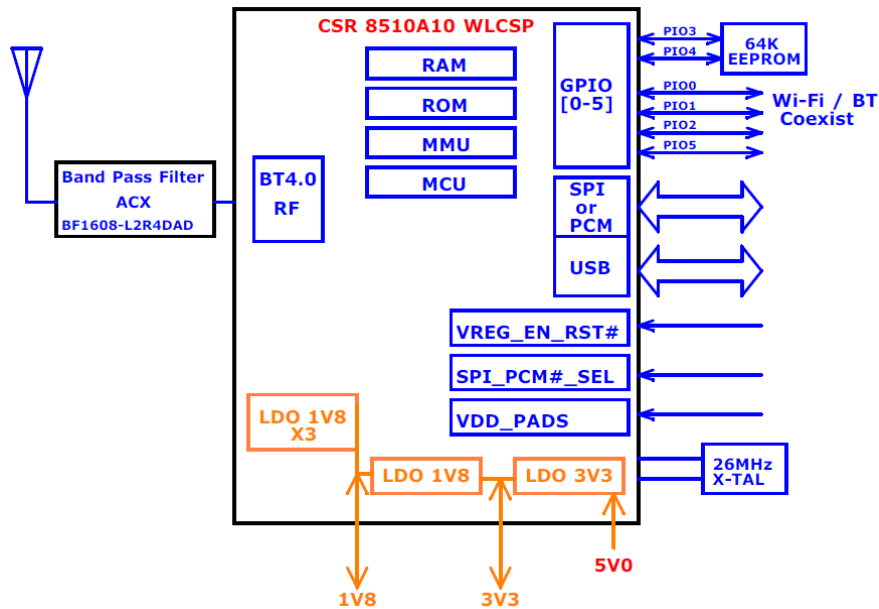


Figure 1: BT800 module block diagram

<b>CS8510A10 (Main chip)</b>	The BT800 is based on CSR8510A10 dual mode chip. The chip is a single-chip radio with on-chip LDO regulators and baseband IC for Bluetooth 2.4 GHz systems including EDR to 3 Mbps. Dedicated signal and baseband processing is included for full Bluetooth operation. The chip provides SPI/PCM and USB interfaces. Up to four general purpose I/Os are available for general use such as Wi-Fi coexistence or general indicators.
<b>Antenna</b>	The antenna is a ceramic monopole chip antenna.
<b>Band Pass Filter</b>	The band pass filter filters the out-of-band emissions from the transmitter to meet the specific regulations for type approvals of various countries.
<b>EEPROM</b>	There are 64 k bits EEPROM embedded on the BT800 module which can be used to store customizable parameters, such as maximum TX power, PCM configuration, USB product ID, USB vendor ID, and USB product description. With that, the BT800 module can support HID/HCI Proxy mode.
<b>Crystal</b>	The embedded 26 MHz crystal is used for generating the clock for the entire module.

## 4 SPECIFICATIONS

Table 1: BT800 specifications

CATEGORIES	FEATURE	IMPLEMENTATION
Wireless Specification	Bluetooth®	V4.0 Dual Mode
	Frequency	2.402 - 2.480 GHz
	Maximum Transmit Power	Class 1 +8 dBm from antenna
	Receive Sensitivity	-89 dBm
	Range	Circa 100 meters
	Data Rates	Up to 3 Mbps (over the air)
Host Interface	USB	Full Speed USB 2.0
	GPIO	Four configurable lines (1.8V/3.3V configurable by VDD_PADS)
Operational Modes	HCI	Host Controller Interface over USB
	HID Proxy Mode	Human Interface Device
EEPROM	2-wire	64 K bits
Coexistence	802.11 (Wi-Fi)	3 wire CSR schemes supported (Unity-3;Unity-3e, and Unity+)
Supply Voltage	Supply	5V +/-10%
		<b>Note:</b> See <a href="#">Implementation Note</a> for details on different DC power selections on the BT800.
Power Consumption	Current	Idle Mode ~ 5 mA
		File Transfer ~ 58 mA
Antenna Option	Internal	Multilayer ceramic antenna with up to 41% efficiency.
Physical	Dimensions	8.5 x 13 x 1.6 mm (BT800 - Module)
		16 x 43 x 11 (BT820 - USB Dongle)
Environmental	Operating	-30C to +85C
	Storage	-40C to +85C
Miscellaneous	Lead Free	Lead-free and RoHS compliant
	Warranty	1 Year
Approvals	Bluetooth®	Controller Subsystem Approved
	FCC / IC / CE	All BT800 series

## 5 PIN DEFINITIONS

Table 2: BT800 pin definitions

#	Pin Name	I/O	Supply Domain	Description
1	SPI_PCM#_SEL	Input with weak internal pull-down	VDD_PADS	High switches SPI/PCM lines to SPI, Low switches SPI/PCM lines to PCM/PIO
2	VDD_HOST	Power supply	(3.1V-3.6V)	USB system positive supply
3	GND	GND	-	Ground
4	USB+	Bidirectional	VDD_HOST	USB data plus with selectable internal 1.5k $\Omega$ pull-up resistor
5	USB-	Bidirectional	VDD_HOST	
6	GND	GND	-	Ground
7	VREG_IN_USB	Power supply	Analogue regulator input	Input to USB regulator. Connect to external USB bus supply (USB_VBUS)
8	VREG_EN_RST#	Input with strong internal pull-down	VDD_PADS	Take high to enable internal regulators. Also acts as active low reset. Maximum voltage is VDD_PADS. <b>Note:</b> USB regulator is always enabled and not controlled by this pin.
9	VREG_IN_HV	Analogue regulator input / output	3.3V	Input to internal high-voltage regulator to 1.8V regulator, 3.3V output from USB regulator.
10	VREG_OUT_HV	Analogue regulator input / output	1.8V	Output from internal high-voltage to 1.8V regulator. Input to second stage internal regulators.
11	GND	GND	-	Ground
12	GND	GND	-	Ground
13	GND	GND	-	Ground
14	GND	GND	-	Ground
15	GND	GND	-	Ground
16	GND	GND	-	Ground
17	N/C	-	-	This pin is reserved for future use. No connection.
18	GND	GND	-	Ground
19	PCM_SYNC/ SPI_CS#/ PIO23	Bidirectional, tri-state, with weak internal pull-down	VDD_PADS	PCM synchronous data sync SPI chip select, active low Programmable input/output line
20	PCM_CLK/ SPI_CLK/ PIO24	Bidirectional, tri-state, with weak internal pull-down	VDD_PADS	PCM synchronous data clock SPI clock Programmable input/output line
21	PCM_IN/ SPI_MOSI/ PIO21	Input, tri-state, with weak internal pull-down	VDD_PADS	PCM synchronous data input SPI data input Programmable input/output line

## BT800 Hardware Integration Guide

Version 1.1

#	Pin Name	I/O	Supply Domain	Description
22	PCM_OUT/ SPI_MISO/ PIO22	Output, tri-state, with weak internal pull-down	VDD_PADS	PCM synchronous data output SPI data output Programmable input/output line
23	PIO0/ WLAN_ACTIVE	Bidirectional, tri-state, with weak internal pull-down	VDD_PADS	Programmable input/output line
24	GND	GND	-	Ground
25	PIO1/ BT_PIRORITY	Bidirectional, tri-state, with weak internal pull-down	VDD_PADS	Programmable input/output line
26	PIO2/ BT_ACTIVE	Bidirectional, tri-state, with weak internal pull-down	VDD_PADS	Programmable input/output line
27	VDD_PADS	Power supply	(1.7V-3.6V)	Positive supply for digital I/O pads
28	PIO5	Bidirectional, tri-state, with weak internal pull-down	VDD_PADS	Programmable input/output line

## 6 DC ELECTRICAL CHARACTERISTIC

Table 3: Absolute maximum ratings

Rating	Min	Max	Unit
Storage temperature	-40	+85	°C
VREG_IN_USB	-0.2	5.75	V
VREG_IN_HV	-0.2	4.9	V
VDD_HOST	-0.2	3.7	V
VDD_PADS	-0.2	3.7	V
Other terminal voltages	VSS - 0.4V	VDD + 0.4 V	V

Table 4: Recommended operating conditions

Rating	Min	Max	Unit
Operating temperature	-30	+85	°C
VREG_IN_USB	4.5	5.5	V
VREG_IN_HV	3.1	3.6	V
VDD_HOST	3.1	3.6	V
VDD_PADS	1.7	3.6	V

Table 5: USB Linear Regulator

Rating	Min	Typ	Max	Unit
Input voltage (VREG_IN_USB)	4.5	5.0	5.5	V



## BT800 Hardware Integration Guide

Version 1.1

Output voltage (VREG_IN_HV)	3.2	3.3	3.4	V
Output current	-	-	150	mA

Table 6: High-voltage Linear Regulator

Normal Operation	Min	Typ	Max	Unit
Input voltage (VREG_IN_HV)	3.1	3.3	3.6	V
Output voltage (VREG_OUT_HV)	1.75	1.85	1.95	V
Temperature coefficient	-200	-	200	ppm/°C
Output noise (frequency range 100Hz to 100kHz)	-	-	0.4	mV rms
Settling time (settling time within 10% of final value)	-	-	5	µs
Output current	-	-	100	mA
Quiescent current (excluding load, load <1mA)	30	40	60	µA
Low-power Mode				
Quiescent current (excluding load, load <100µA)	14	18	23	µA

Table 7: Digital I/O Characteristics

Normal Operation	Min	Typ	Max	Unit
Input Voltage				
VIL input logic level low	-0.4	-	0.4	V
VIH input logic level high	0.7 x VDD	-	VDD + 0.4	V
Output Voltage				
VOL output logic level low, IOL = 4.0 mA	-	-	0.4	V
VOH output logic level high, IOL = 4.0 mA	0.75 x VDD	-	-	V
Input and Tristate Currents				
Strong pull-up	-150	-40	-10	µA
Strong pull-down	10	40	150	µA
Weak pull-up	-5	-1.0	-0.33	µA
Weak pull-down	0.33	1.0	5.0	µA
CI input capacitance	1.0	-	5.0	pF

Table 8: Current Consumption

Normal Operation	Peak (8 dBm)	AVG	Unit
Idle		5	mA

USB Suspend		200	μA
Inquiry	73	51	mA
File Transfer	73	58	mA
LE Connected (Master)	74		mA
LE Scan (Master)	48		mA

## 7 RF CHARACTERISTICS

Table 9: Receiver Characteristics

RF Characteristics, VDD = 3.3V @ room temperature unless otherwise specified		MIn	Typ.	Max	BT. Spec.	Unit
Maximum RF Transmit Power			8	10	20	dBm
RF power variation over temperature range			1.5		-	dB
RF power variation over supply voltage range				0.2	-	dB
RF power variation over BT band			2		-	dB
RF power control range		-21		8	-	dBm
20 dB band width for modulated carrier					1000	kHz
ACP	F = F <sub>0</sub> ± 2MHz				-20	
	F = F <sub>0</sub> ± 3MHz				-40	
	F = F <sub>0</sub> > 3MHz				-40	
Drift rate			10		+/-25	kHz
ΔF <sub>1avg</sub>			165		140<175	kHz
ΔF <sub>1max</sub>			168		140<175	kHz
ΔF <sub>2avg</sub> / ΔF <sub>1avg</sub>			0.9		>=0.8	

Table 10: BDR and EDR receiver sensitivity

RF Characteristics, VDD = 3.3V @ room temp.	Packet Type	Min	Typ	Max	BT. Spec.	Unit
Sensitivity for 0.1% BER	DH1		-89		-70	dBm
	DH3		-89			dBm
	DH5		-89			dBm
	2-DH5		-92			dBm
	3-DH5		-85			dBm
Sensitivity variation over BT band	All		2			dB
Sensitivity variation over temperature range	All		TBD			dB

## 8 INTERFACE

### 8.1 PIO

See the Device Terminal Functions section for the list of supplies to the PIOs (Programmable I/O ports).

PIO lines are configured through software to have either weak or strong pull-ups or pull-downs. All PIO lines are configured as inputs with weak pull-downs at reset and have additional individual bus-keeper configuration.

### 8.2 WLAN Coexistence Interface

Dedicated hardware is provided to implement a variety of WLAN coexistence schemes. There is support for:

- Channel skipping AFH
- Priority signaling
- Channel signaling
- Host passing of channel instructions

The BT800 supports the WLAN coexistence schemes:

- Unity-3
- Unity-3e
- Unity+

For more information see [BT800 WLAN Coexistence Schemes and LED Indication](#).

### 8.3 USB Interface

BT800 has a full-speed (12 Mbps) USB interface for communicating with other compatible digital devices. The USB interface on the BT800 acts as a USB peripheral, responding to requests from a master host controller.

BT800 supports the Universal Serial Bus Specification (USB v2.0 Specification) and USB Battery Charging Specification, available from <http://www.usb.org>. For more information on how to integrate the USB interface on BT800, see [Figure 19](#) located in the following section: [USB Dongle Design Example Using BT800](#).

As well as describing USB basics and architecture, the application note describes:

- Power distribution for high and low bus-powered configurations
- Power distribution for self-powered configuration, which includes USB VBUS monitoring
- USB enumeration

- Electrical design guidelines for power supply and data lines, as well as PCB tracks and effects of ferrite beads
- USB suspend modes and Bluetooth low-power modes
- Global suspend
- Selective suspend, includes remote wake
- Wake on Bluetooth, includes permitted devices and set-up prior to selective suspend
- Suspend mode current draw
- PIO status in suspend mode
- Resume, detach, and wake PIOs
- Battery charging from USB: dead battery provision, charge currents, charging in suspend modes and USB
- VBUS voltage consideration
- USB termination when interface is not in use
- Internal modules, certification and non-specification compliant operation

## 8.4 PCM Interface


The audio PCM interface on the BT800 supports:

- Continuous transmission and reception of PCM encoded audio data over Bluetooth.
- Processor overhead reduction through hardware support for continual transmission and reception of PCM data.
- A bidirectional digital audio interface that routes directly into the baseband layer of the firmware. It does not pass through the HCI protocol layer.
- Hardware on the BT800 for sending data to and from a SCO connection.
- Up to three SCO connections on the PCM interface at any one time.
- PCM interface master, generating PCM\_SYNC and PCM\_CLK.
- PCM interface slave, accepting externally generated PCM\_SYNC and PCM\_CLK.
- Various clock formats including:
  - Long Frame Sync
  - Short Frame Sync
- GCI timing environments.
- 13-bit or 16-bit linear, 8-bit  $\mu$ -law, or A-law companded sample formats.
- Receives and transmits on any selection of three of the first four slots following PCM\_SYNC.

The PCM configuration options are enabled by setting PSKEY\_PCM\_CONFIG32.

### 8.4.1 PCM Interface Master/Slave

When configured as the master of the PCM interface, the BT800 generates PCM\_CLK and PCM\_SYNC.

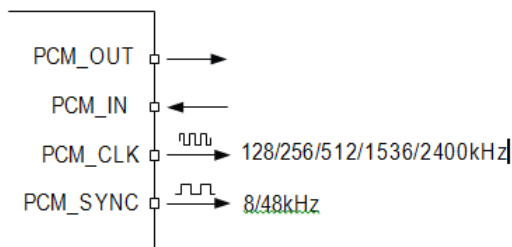

*Figure 2: PCM Interface Master*

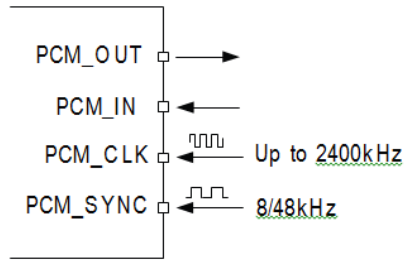


Figure 3: PCM Interface Slave

## 8.4.2 Long Frame Sync

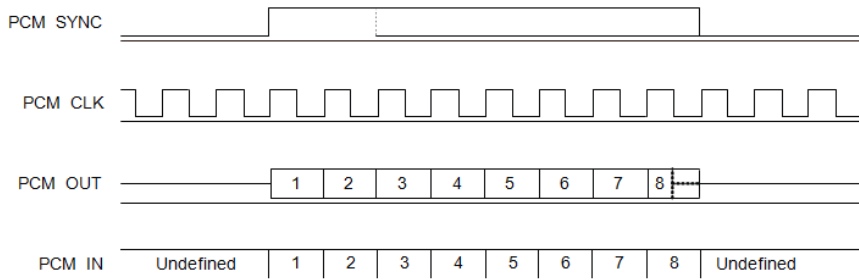


Figure 4: Long Frame Sync (shown with 8-bit Companded Sample)

Long Frame Sync is the name given to a clocking format that controls the transfer of PCM data words or samples. In Long Frame Sync, the rising edge of PCM\_SYNC indicates the start of the PCM word. When the BT800 is configured as PCM master, generating PCM\_SYNC and PCM\_CLK, then PCM\_SYNC is eight bits long. When the BT800 is configured as PCM Slave, PCM\_SYNC is from one cycle PCM\_CLK to half the PCM\_SYNC rate.

BT800 samples PCM\_IN on the falling edge of PCM\_CLK and transmits PCM\_OUT on the rising edge. PCM\_OUT is configurable as high impedance on the falling edge of PCM\_CLK in the LSB position or on the rising edge.

## 8.4.3 Short Frame Sync

In Short Frame Sync, the falling edge of PCM\_SYNC indicates the start of the PCM word. PCM\_SYNC is always one clock cycle long.

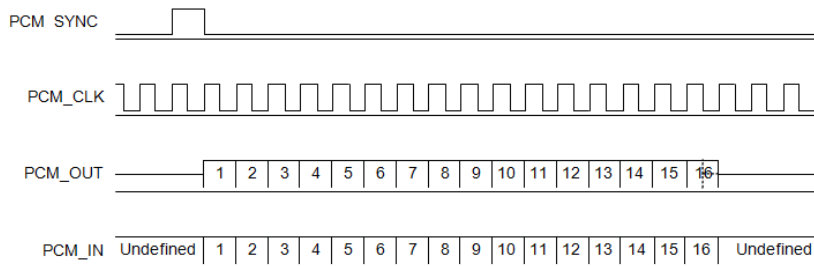


Figure 5: Short Frame Sync (Shown with 16-bit Sample)

As with Long Frame Sync, BT800 samples PCM\_IN on the falling edge of PCM\_CLK and transmits PCM\_OUT on the rising edge. PCM\_OUT is configurable as high impedance on the falling edge of PCM\_CLK in the LSB position or on the rising edge.

## 8.4.4 Multi-Slot Operation

More than 1 SCO connection over the PCM interface is supported using multiple slots. Up to 3 SCO connections are carried over any of the first 4 slots.

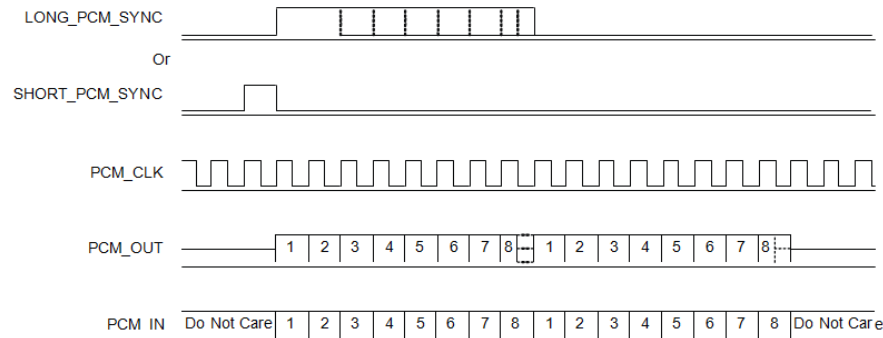


Figure 6: Multi-slot Operation with 2 Slots and 8-bit Companded Samples

## 8.5 GCI Interface

BT800 is compatible with the GCI, a standard synchronous 2B+D ISDN timing interface. The two 64 kbps B channels are accessed when this mode is configured.

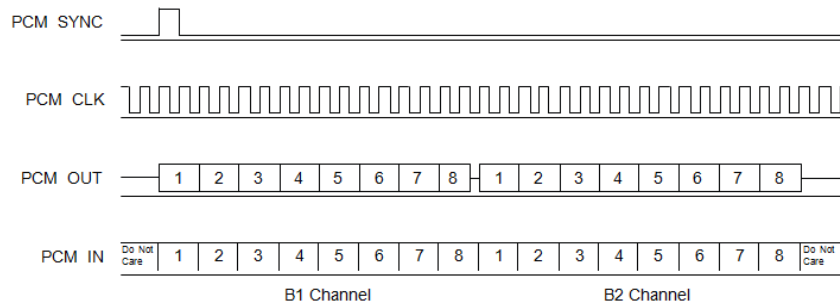


Figure 7: Multi-slot Operation

The start of frame is indicated by the rising edge of PCM\_SYNC and runs at 8 kHz.

## 8.6 Slots and Sample Formats

BT800 receives and transmits on any selection of the first four slots following each sync pulse. Slot durations are either 8 or 16 clock cycles:

- 8 clock cycles for 8-bit sample formats.
- 16 clock cycles for 8-bit, 13-bit, or 16-bit sample formats.

BT800 supports:

- 13-bit linear, 16-bit linear and 8-bit  $\mu$ -law or A-law sample formats
- A sample rate of 8 kbps
- Little or big endian bit order

- For 16-bit slots, the three or eight unused bits in each slot are filled with sign extension, padded with zeros or a programmable 3-bit audio attenuation compatible with some codecs.

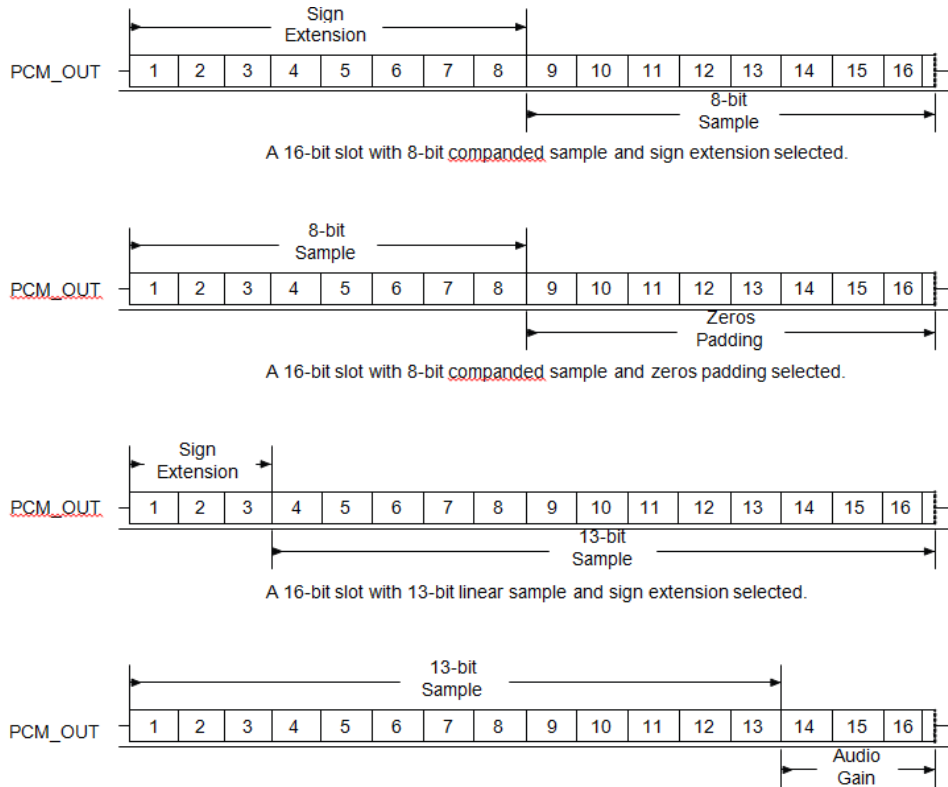


Figure 8: 16-bit Slot Length and Sample Formats


## 8.7 PCM Timing Information

Table 11: PCM Timing information

Symbol	Parameter		Min	Typ	Max	Unit
fmclk	PCM_CLK frequency	4MHz DDS generation. Frequency selection is programmable.	-	128 256 512	-	kHz
		48MHz DDS generation. Frequency selection is programmable.	2.9	-	-	kHz
		PCM_SYNC frequency for SCO connection	-	8	-	kHz
tmclkh (a)	PCM_CLK high	4MHz DDS generation	980	-	-	ns
tmclkl a)	PCM_CLK low	4MHz DDS generation	730	-	-	ns
-	PCM_CLK jitter	48MHz DDS generation	-	-	21	ns pk-pk
tdmclksynch	Delay time from PCM_CLK high to PCM_SYNC high	4MHz DDS generation	-	-	20	ns
		48MHz DDS generation	-	-	40.83	ns

(a) Assumes normal system clock operation. Figures vary during low-power modes, when system clock speeds are reduced.

Symbol	Parameter	Min	Typ	Max	Unit
tdmclkhsyncl	Delay time from PCM_CLK 4MHz DDS generation	-	-	20	ns
	high to PCM_SYNC low 48MHz DDS generation	-	-	40.83	ns
tdmclklpoutz	Delay time from PCM_CLK low to PCM_OUT high impedance	-	-	20	ns
tdmclkhpoutz	Delay time from PCM_CLK high to PCM_OUT high impedance	-	-	20	ns
tsupinckl	Set-up time for PCM_IN valid to PCM_CLK low	20	-	-	ns
thpinckl	Hold time for PCM_CLK low to PCM_IN invalid	0	-	-	ns

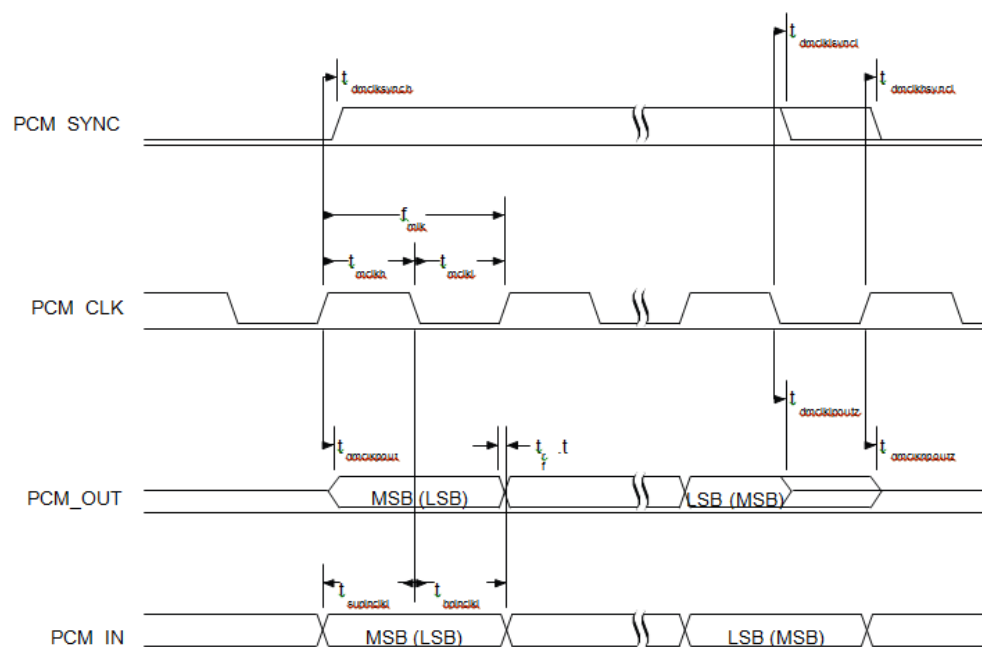

*Figure 9: PCM Master Timing Long Frame Sync*



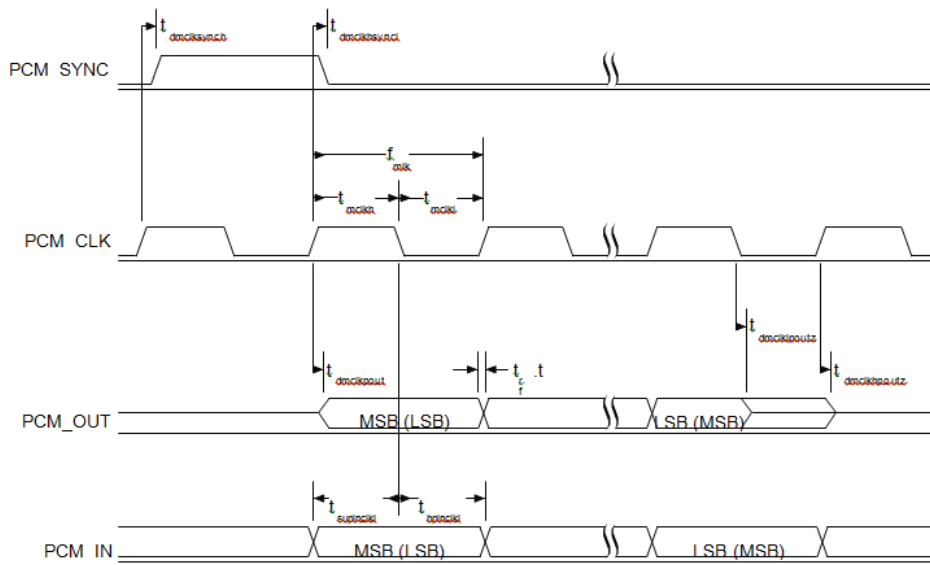


Figure 10: PCM Master Timing Short Frame Sync

## 8.8 PCM Slave Timing

Symbol	Parameter	Min	Typ	Max	Unit
fclk	PCM clock frequency (Slave mode: input)	64	-	2048	kHz
fclk	PCM clock frequency (GCI mode)	128	-	4096	kHz
tclkhl	PCM_CLK low time	200	-	-	ns
tclkh	PCM_CLK high time	200	-	-	ns

## 8.9 PCM Slave Mode Timing Parameters

Symbol	Parameter	Min	Typ	Max	Unit
thclkssynch	Hold time from PCM_CLK low to PCM_SYNC high	2	-	-	ns
tsusclkssynch	Set-up time for PCM_SYNC high to PCM_CLK low	20	-	-	ns
tdpout	Delay time from PCM_SYNC or PCM_CLK, whichever is later, to valid PCM_OUT data (long frame sync only)	-	-	15	ns
tdsclkhout	Delay time from CLK high to PCM_OUT valid data	-	-	15	ns
tdpoutz	Delay time from PCM_SYNC or PCM_CLK low, whichever is later, to PCM_OUT data line high impedance	-	-	20	ns
tsupinsclkl	Set-up time for PCM_IN valid to CLK low	20	-	-	ns
thpinsclkl	Hold time for PCM_CLK low to PCM_IN invalid	2	-	-	ns

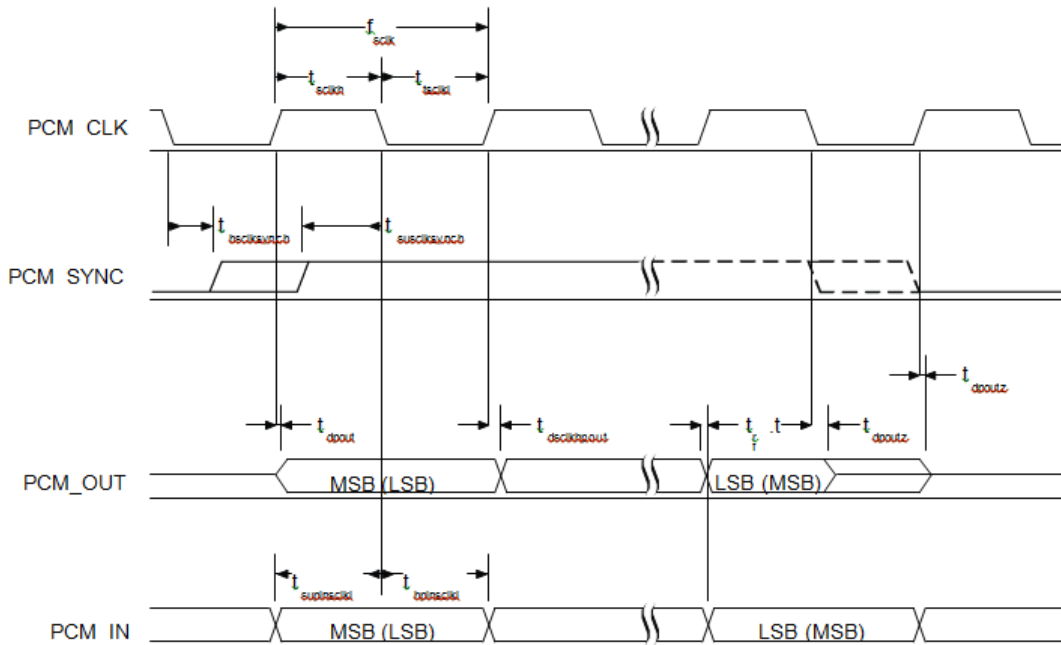


Figure 11: PCM Slave Timing Long Frame Sync

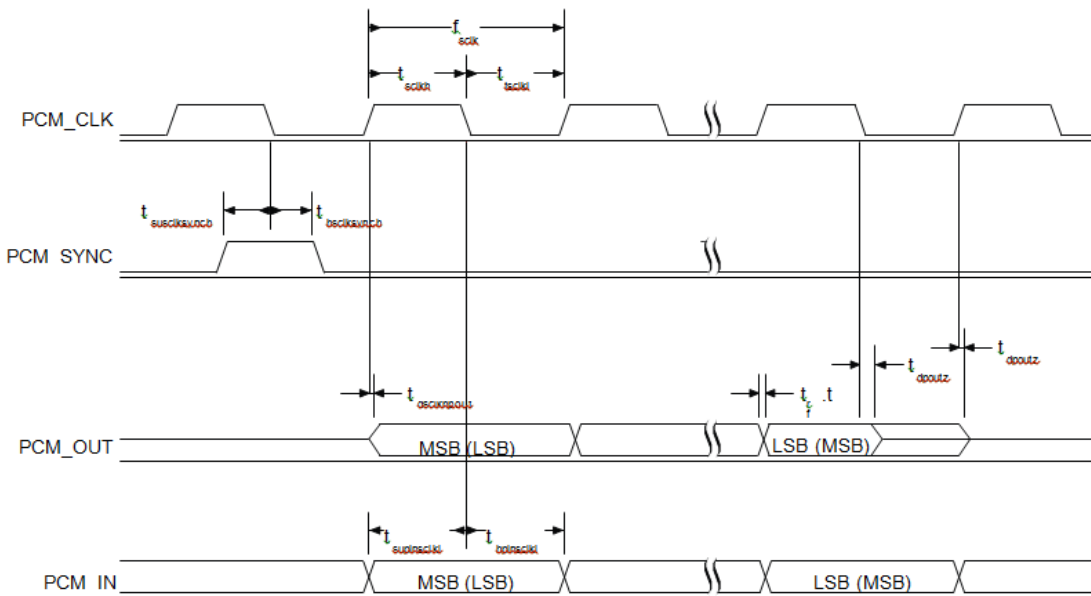


Figure 12: PCM Slave Timing Short Frame Sync

## 8.10 PCM\_CLK and PCM\_SYNC Generation

BT800 has two methods of generating PCM\_CLK and PCM\_SYNC in master mode:

- Generating these signals by DDS from BT800 internal 4MHz clock. Using this mode limits PCM\_CLK to 128, 256 or 512 kHz and PCM\_SYNC to 8 kHz.
- Generating these signals by DDS from an internal 48MHz clock, which enables a greater range of frequencies to be generated with low jitter but consumes more power. To select this second method set bit 48M\_PCM\_CLK\_GEN\_EN in PSKEY\_PCM\_CONFIG32. When in this mode and with long frame sync, the length of PCM\_SYNC is either 8 or 16 cycles of PCM\_CLK, determined by LONG\_LENGTH\_SYNC\_EN in PSKEY\_PCM\_CONFIG32.

Equation 8.1 describes PCM\_CLK frequency when generated from the internal 48MHz clock:

$$f = \frac{\text{CNT\_RATE}}{\text{CNT\_LIMIT}} \times 24\text{MHz}$$

*Equation 8.1: PCM\_CLK Frequency Generated Using the Internal 48MHz Clock*

Set the frequency of PCM\_SYNC relative to PCM\_CLK using Equation 8.2:

$$f = \frac{\text{PCM\_CLK}}{\text{SYNC\_LIMIT} \times 8}$$

*Equation 8.2: PCM\_SYNC Frequency Relative to PCM\_CLK*

CNT\_RATE, CNT\_LIMIT and SYNC\_LIMIT are set using PSKEY\_PCM\_LOW\_JITTER\_CONFIG. As an example, to generate PCM\_CLK at 512kHz with PCM\_SYNC at 8kHz, set SKEY\_PCM\_LOW\_JITTER\_CONFIG to 0x08080177.

## 8.11 PCM Configuration

Configure the PCM by using PSKEY\_PCM\_CONFIG32 and PSKEY\_PCM\_LOW\_JITTER\_CONFIG (See your PSKey file). The default for PSKEY\_PCM\_CONFIG32 is 0x00800000 (for example: first slot following sync is active, 13-bit linear voice format, long frame sync and interface master generating 256kHz PCM\_CLK from 4MHz internal clock with no tri-state of PCM\_OUT).

## 8.12 Digital Audio Interface (I<sup>2</sup>S)

The digital audio interface supports the industry standard formats for I<sup>2</sup>S, left-justified or right-justified. The interface shares the same pins as the PCM interface, which means each audio bus is mutually exclusive in its usage. Table 13 lists these alternative functions. Figure 11 shows the timing diagram.

*Table 13: Alternative Functions of the Digital Audio Bus Interface on the PCM Interface.*

PCM Interface	I <sup>2</sup> S Interface
PCM_OUT	SD_OUT
PCM_IN	SD_IN
PCM_SYNC	WS
PCM_CLK	SCK

## BT800 Hardware Integration Guide

### Version 1.1

Configure the digital audio interface using PSKEY\_DIGITAL\_AUDIO\_CONFIG, see BlueCore Audio API Specification and the PS Key file.

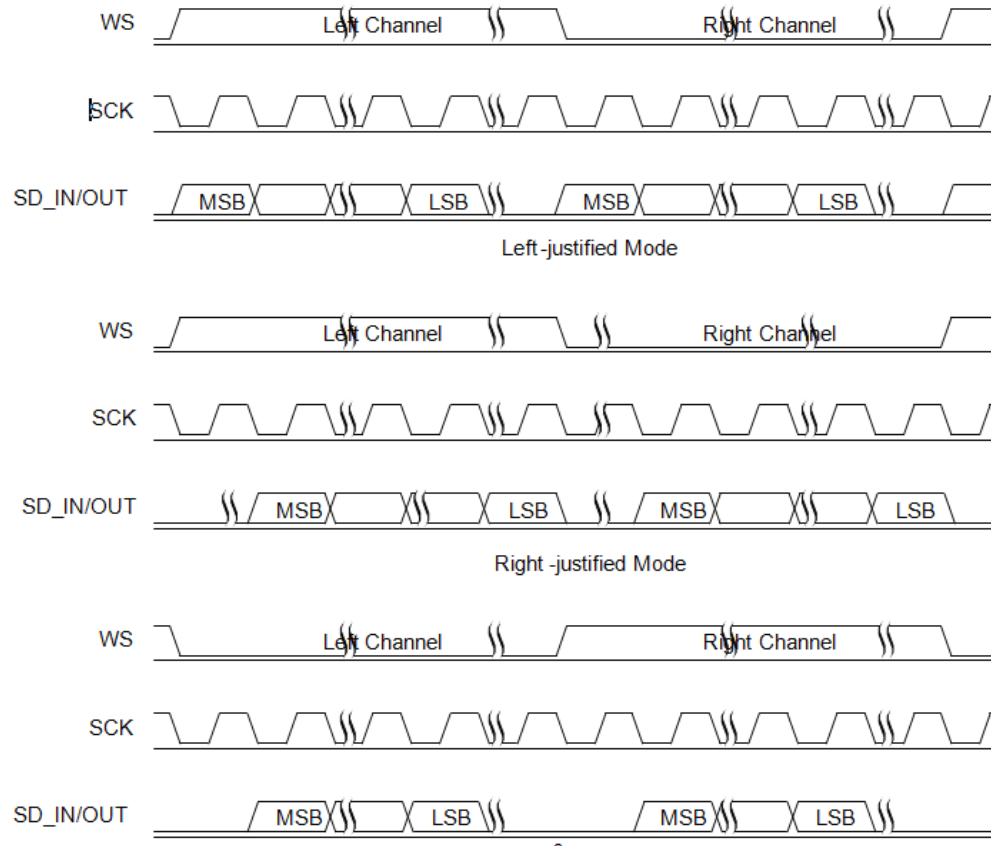


Figure 13: PCM Configuration

The internal representation of audio samples within BT800 is 16-bit and data on SD\_OUT is limited to 16-bit per channel.

Table 14: Digital Audio Interface Slave Timing

Symbol	Parameter	Min	Typ	Max	Unit
-	SCK Frequency	-	-	6.2	MHz
-	WS Frequency	-	-	96	kHz
tch	SCK high time	80	-	-	ns
tcl	SCK low time	80	-	-	ns

Table 15: I<sup>2</sup>S Slave Mode Timing

Symbol	Parameter	Min	Typ	Max	Unit
tssu	WS valid to SCK high set-up time	20	-	-	ns
tsh	SCK high to WS invalid hold time	2.5	-	-	ns
topd	SCK low to SD_OUT valid delay time	-	-	20	ns
tisu	SD_IN valid to SCK high set-up time	20	-	-	ns
tih	SCK high to SD_IN invalid hold time	2.5	-	-	ns

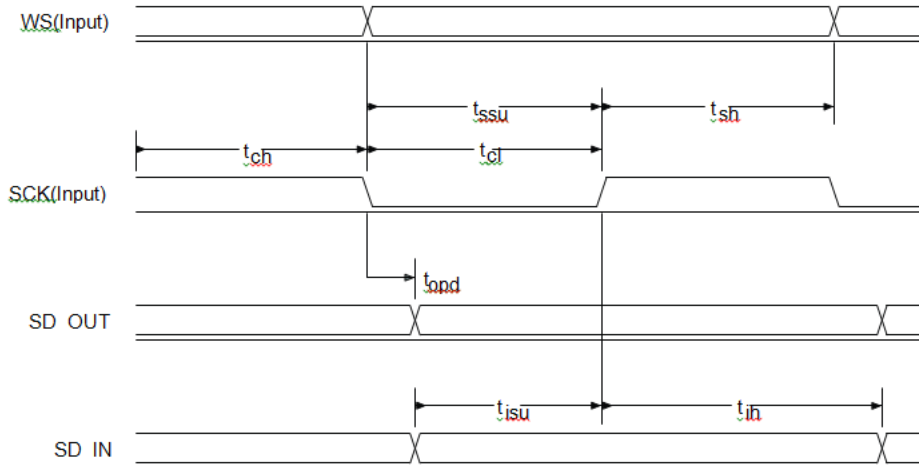


Figure 14: Digital Audio Interface Slave Timing

Table 16: Digital Audio Interface Master Timing

Symbol	Parameter	Min	Typ	Max	Unit
-	SCK Frequency	-	-	6.2	MHz
-	WS Frequency	-	-	96	kHz

Table 17: I<sup>2</sup>S Master Mode Timing Parameters, WS and SCK as Outputs

Symbol	Parameter	Min	Typ	Max	Unit
tspd	SCK low to WS valid delay time	-	-	39.27	ns
topd	SCK low to SD_OUT valid delay time	-	-	18.44	ns
tisu	SD_IN valid to SCK high set-up time	18.44	-	-	ns
tih	SCK high to SD_IN invalid hold time	0	-	-	ns

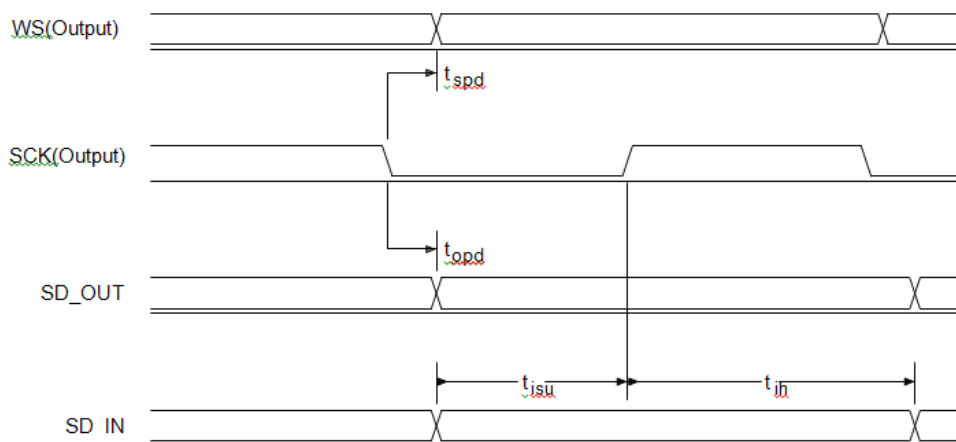


Figure 15: Digital Audio Interface Master Timing

## 9 POWER CONTROL AND REGULATION

See the Example Application Schematic (Figure 19) for the regulator configuration. BT800 contains five regulators:

- USB linear regulator, to generate the 3.3 V for the USB interface and the input to the high-voltage linear regulator.
- High-voltage linear regulator, to generate the main 1.8 V from the USB linear regulator or an external 3.3 V.
- This regulator then feeds the three low-voltage regulators:
- Low-voltage VDD\_DIG linear regulator, a programmable low-voltage regulator to supply a 0.90 V to 1.25 V digital supply, VDD\_DIG.
- Low-voltage VDD\_ANA linear regulator, to supply the radio supply, VDD\_RADIO.
- Low-voltage VDD\_AUX linear regulator, to supply the auxiliary supply, VDD\_AUX.

### 9.1 USB Linear Regulator

The integrated USB LDO linear regulator is available as a 3.3 V supply rail and is intended to supply the USB interface and the high-voltage linear regulator. The input voltage range is between 4.25 V and 5.75 V. The maximum current from this regulator is 150 mA, of which 50 mA is available for external use (for example EEPROM/LED). Externally decouple the output of this regulator using a low ESR MLC capacitor to the VREG\_IN\_HV pin. The regulator operates correctly with an output capacitor of 1  $\mu$ F to 4.7  $\mu$ F ( $\pm 20\%$ ).

This regulator is enabled by default. If the USB linear regulator is not required, leave its input (VREG\_IN\_USB) unconnected.

### 9.2 High-voltage Linear Regulator

The integrated high-voltage linear regulator is available to power the main 1.8 V supply rail. The input voltage range is between 2.3 V and 4.8 V. The maximum current from this regulator is 100 mA. Externally decouple the output of this regulator using a low ESR MLC capacitor of a minimum 1.5  $\mu$ F to the VREG\_OUT\_HV pin. Take VREG\_EN\_RST# high to enable this regulator. If this regulator is not required, then leave VREG\_IN\_HV unconnected or tied to VREG\_OUT\_HV.

### 9.3 Low-voltage VDD\_DIG Linear Regulator

The integrated low-voltage VDD\_DIG linear regulator is available to power a 0.90 V to 1.25 V supply rail which includes the digital circuits on CSR8510 WLCSP. The input voltage range is between 1.70 V and 1.95 V.

Externally decouple the output of this regulator using a low ESR MLC capacitor of a minimum 1.5  $\mu$ F to the VDD\_DIG pin. Software enables and controls the output voltage.

### 9.4 Low-voltage VDD\_RADIO Linear Regulator

The BT800 integrated low-voltage VDD\_RADIO linear regulator is available to power a 1.35 V analogue supply rail which includes the radio circuits on CSR8510 WLCSP. The input voltage range is between 1.70 V and 1.95 V.

**Decoupling capacitor on the output of this regulator on BT800 using a low ESR MLC capacitor** of a minimum 1.5  $\mu$ F to ensure the best performance. Software enables and controls the output voltage. The regulator is disabled when the BT800 is in deep sleep or reset.

### 9.5 Low-voltage VDD\_AUX Linear Regulator

The integrated low-voltage VDD\_AUX linear regulator is available to power a 1.35 V auxiliary supply rail which includes the VDD\_AUX supply on CSR8510 WLCSP. The input voltage range is between 1.70 V and 1.95 V.

Externally decouple the output of this regulator using a low ESR MLC capacitor of a minimum 470 nF to the VDD\_AUX pin. Take VREG\_EN\_RST# high to enable this regulator. Software controls the output voltage.

### 9.6 Voltage Regulator Enable and Reset

A single pin, VREG\_EN\_RST#, controls both the regulator enables and the digital reset function. All the regulators are enabled, except the USB linear regulator, by taking the VREG\_EN\_RST# pin above 1 volt. Software also controls the regulators. The VREG\_EN\_RST# pin is connected internally to the reset function and is powered from VDD\_HOST, so do not apply voltages above VDD\_HOST to the VREG\_EN\_RST# pin. The REG\_EN\_RST# pin is pulled down internally before the software starts. The VREG\_EN\_RST# pin is an active low reset. Assert the reset signal for a period >5 ms to ensure a full reset.

---

**Note:** The regulator enables are released as soon as VREG\_EN\_RST# is low, so the regulators shut down. Therefore do not take VREG\_EN\_RST# low for less than 5 ms, as a full reset is not guaranteed.

Other reset sources are:

**Power-on reset**

**Via a software-configured watchdog timer**

A warm reset function is also available under software control. After a warm reset the RAM data remains available.

---

### 9.7 Power Sequencing

CSR recommends that all power supplies are powered at the same time. The order of powering the supplies relative to the I/O supply, VDD\_PADS to VDD\_HOST, is not important. If the I/O supply is powered before VDD\_DIG, all digital I/Os are weak pull-downs regardless of the reset state.

10 ANTENNA PERFORMANCE

Figure 16 illustrates antenna performance.

Unit in dBi @2.44GHz	XY-plane		XZ-plane		YZ-plane		Efficiency
	Peak	Avg.	Peak	Avg.	Peak	Avg.	
A1	-3.5	-4.2	3.8	-5.3	3.2	-4.7	41.0%

Figure 16: BT800 Gain Table


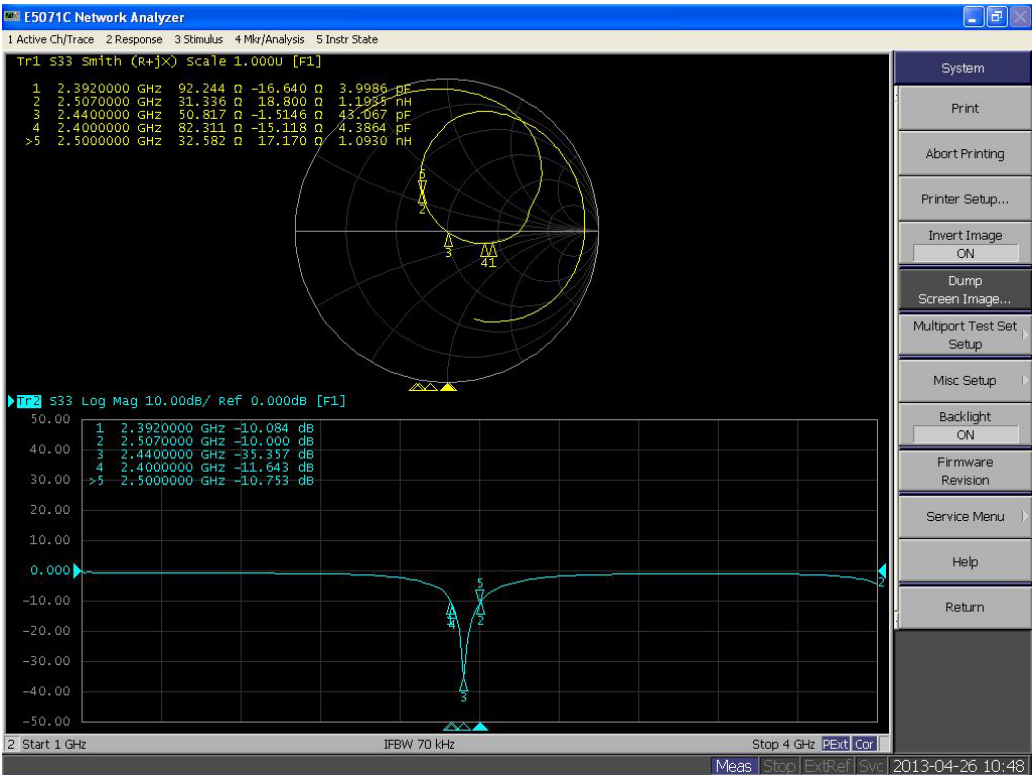


Figure 17: Network Analyzer output




◆XY-plane

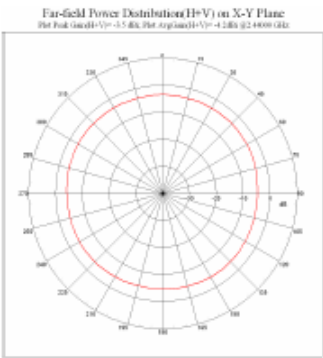

Unit : dBi


	Peak gain	Avg. gain
XY-plane	-3.5	-4.2

◆XZ-plane

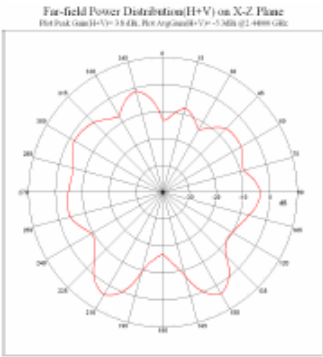

	Peak gain	Avg. gain
XZ-plane	3.8	-5.3

◆YZ-plane

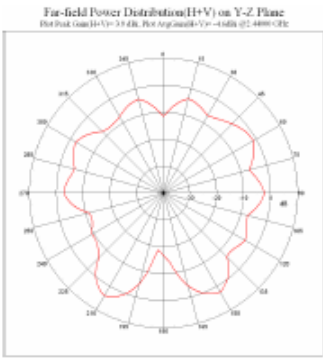


	Peak gain	Avg. gain
YZ-plane	3.2	-4.7


## 11 MECHANICAL DIMENSIONS AND LAND PATTERN

### 11.1 BT800 Mechanical Drawing


Bottom View Device Pads

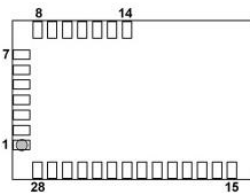

Side View



Top View  
Recommended PCB Layout

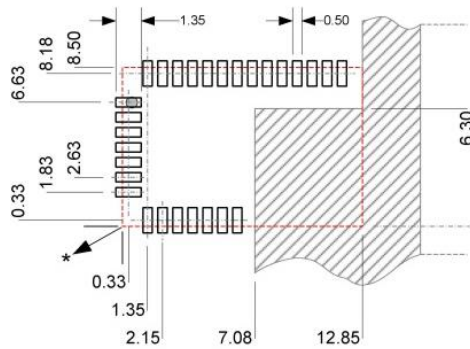

\* Dimensions from corner of BT800 edge

● Pin1




No Copper in this area!



BT800 PCB Edge

Top View

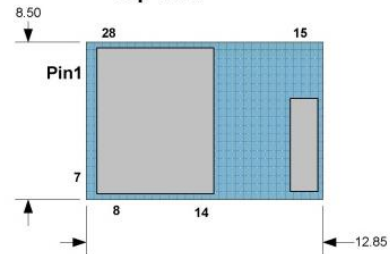


**Note:** Dimensions are in mm.  
Tolerances: .xx  $\pm 0.03$  mm  
.x  $\pm 1.3$  mm

## 12 IMPLEMENTATION NOTE

### 12.1 PCB Layout on Host PCB

Checklist (for PCB):

- **MUST** locate the BT800 module close to the edge of PCB.
- Use solid GND plane on inner layer (for best EMC and RF performance).
- Place GND vias close to module GND pads as possible
- Route traces to avoid noise being picked up on VCC supply.
- Antenna Keep-out area:
  - Ensure there is no copper in the antenna keep-out area on any layers of the host PCB.
  - Keep all mounting hardware and metal clear of the area to allow proper antenna radiation.
  - For best antenna performance, place the BT800 module on the edge of the host PCB, preferably in the corner with the antenna facing the corner.
  - A different host PCB thickness dielectric will have small effect on antenna.

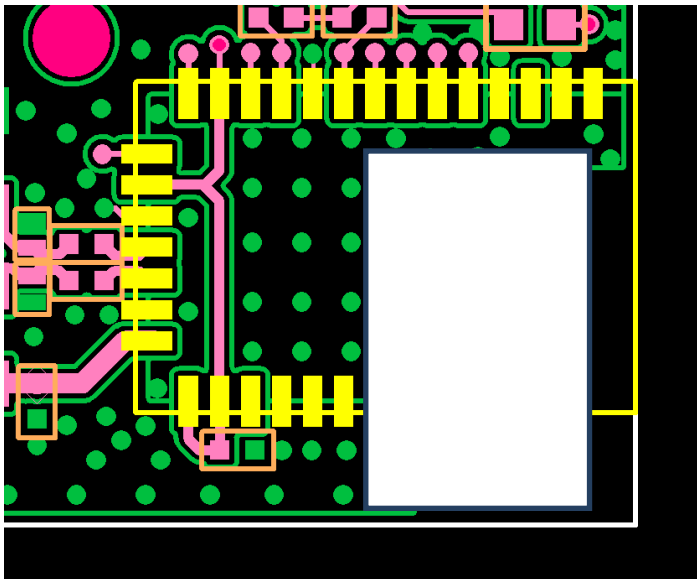

*Figure 18: Recommend Antenna keep-out area (in White) used on the BT800*

#### 12.1.1 Antenna Keep-out and Proximity to Metal or Plastic

Checklist (for metal /plastic enclosure):

- Minimum safe distance for metals without seriously compromising the antenna (tuning) is 40 mm top/bottom and 30 mm left or right.
- Metal close to the BT800 chip monopole antenna (bottom, top, left, right, any direction) will have degradation on the antenna performance. The amount of degradation is entirely system dependent which means some testing by customers is required (in their host application).
- Any metal closer than 20 mm starts to significantly degrade performance (S11, gain, radiation efficiency).
- It is best that the customer tests the range with mock-up (or actual prototype) of the product to assess effects of enclosure height (and material whether metal or plastic).

[illegible]

Technical drawings of the LAIRD 10000 USB drive showing front, side, and top views with dimensions:

- Front View:** Shows the drive with the "LAIRD" logo and "10000" capacity. Dimensions: Total length 46.75, Width 17.40.
- Side View:** Shows the drive's profile with a rounded bottom. Dimensions: Total length 46.75, Width 17.40.
- Top View:** Shows the drive from above. Dimensions: Width 17.40, Depth 11.68.

Americas: +1-800-492-2320 Option 2  
Europe: +44-1628-858-940  
Hong Kong: +852-2923-0610  
[www.lairdtech.com/bluetooth](http://www.lairdtech.com/bluetooth)

### 12.1.3 DC power supply options for using BT800 module

- **Using USB bus power (5V±10%)**  
Apply USB bus power (5V ±10%) directly to the Pin-7 (VREG\_IN\_USB) and pull-high on Pin-8 (VREG\_EN\_RST#) to turn on the internal regulator. The BT800 module generates 3.3 V/1.8 V output on Pin-9 (VREG\_IN\_HV)/Pin-10 (VREG\_OUT\_HV) that can supply to the other DC pin of the board.
- **Using DC power 3.3 V**  
Leave the Pin-7 (VREG\_IN\_USB) no connection, power the on Pin-9 (VREG\_IN\_HV) with 3.3 V and pull-high on Pin-8 (VREG\_EN\_RST#) to turn on the internal regulator. The BT800 module generates 1.8 V output on Pin-10 (VREG\_OUT\_HV) which can supply to the other DC pin of the board.

## 13 APPLICATION NOTE FOR SURFACE MOUNT MODULES

### 13.1 Introduction

Laird surface mount modules are designed to conform to all major manufacturing guidelines. This application note is intended to provide additional guidance beyond the information that is presented in the user manual. This application note is considered a living document and is updated as new information is presented.

The modules are designed to meet the needs of a number of commercial and industrial applications. They are easy to manufacture and they conform to current automated manufacturing processes.

### 13.2 Shipping tray

Modules are shipped in ESD (Electrostatic Discharge) safe trays that can be loaded into most manufacturers pick and place machines. Layouts of the trays are provided in [Figure 21](#).

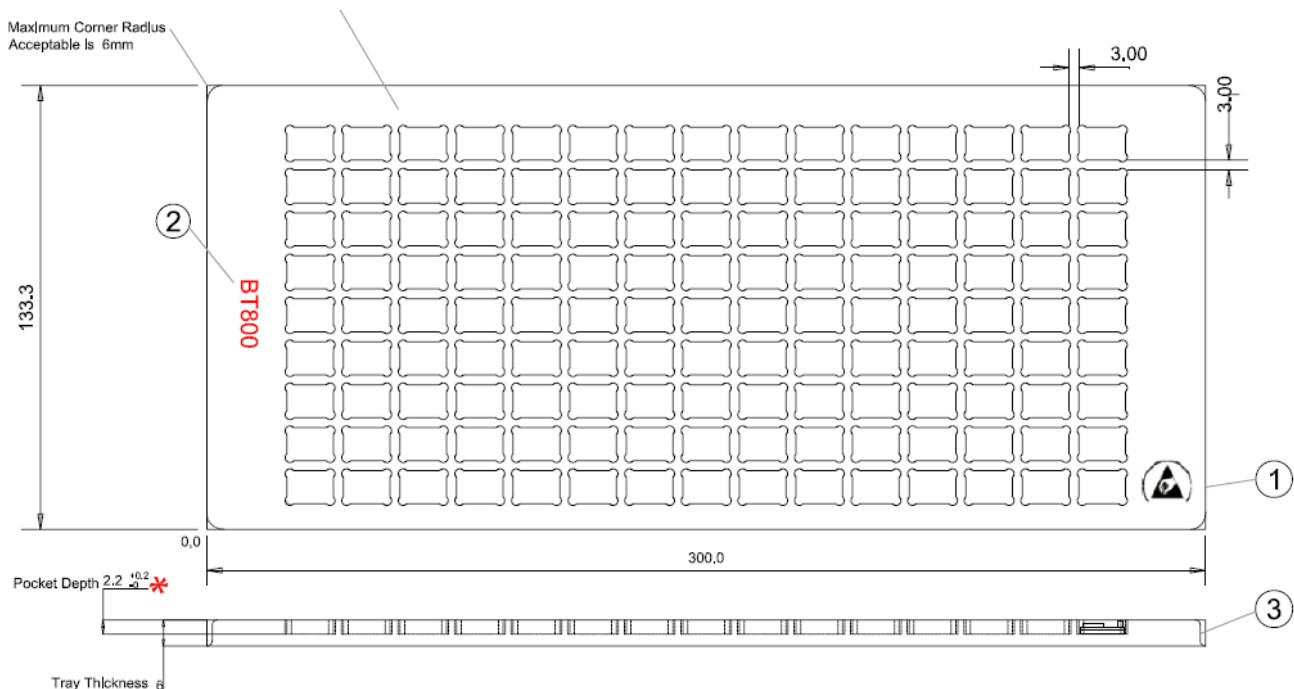


Figure 21: Shipping tray layout

### 13.3 Reflow Parameters

Laird surface mount modules are designed to be easily manufactured, including reflow soldering to a PCB. Ultimately it is the responsibility of the customer to choose the appropriate solder paste and to ensure oven temperatures during reflow meet the requirements of the solder paste. Laird's surface mount modules conform to J-STD-020D1 standards for reflow temperatures.

**Important:** During reflow, modules should not be above 260° and not for more than 30 seconds.

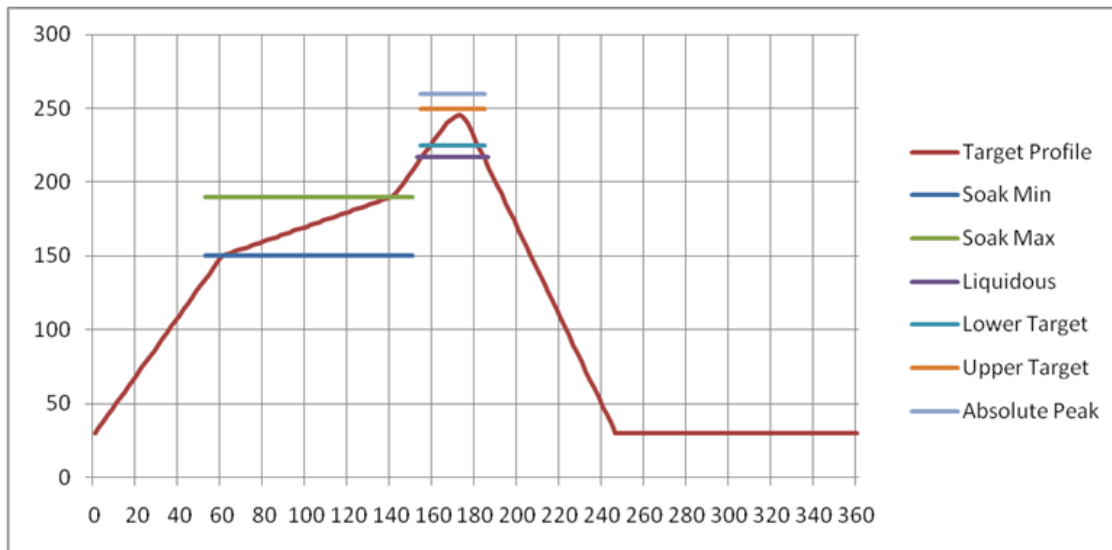


Figure 13-22: Recommended Reflow Temperature

Temperatures should not exceed the minimums or maximums presented in Table 18.

Table 18: Recommended Maximum and minimum temperatures

Specification	Value	Unit
Temperature Inc./Dec. Rate (max)	1~3	°C / Sec
Temperature Decrease rate (goal)	2-4	°C / Sec
Soak Temp Increase rate (goal)	.5 - 1	°C / Sec
Flux Soak Period (Min)	70	Sec
Flux Soak Period (Max)	120	Sec
Flux Soak Temp (Min)	150	°C
Flux Soak Temp (max)	190	°C
Time Above Liquidous (max)	70	Sec
Time Above Liquidous (min)	50	Sec
Time In Target Reflow Range (goal)	30	Sec
Time At Absolute Peak (max)	5	Sec
Liquidous Temperature (SAC305)	218	°C
Lower Target Reflow Temperature	240	°C
Upper Target Reflow Temperature	250	°C
Absolute Peak Temperature	260	°C

## 14 FCC AND IC REGULATORY

Model	US/FCC	CANADA/IC
BT800	SQGBT800	3147A-BT800
BT820	SQGBT800	3147A-BT800
DVK-BT800	SQGBT800	3147A-BT800

The BT800 family has been designed to operate with the antenna listed below having a maximum gain of 0.5 dBi. The required antenna impedance is 50 ohms.

Item	Part Number	Mfg.	Type	Gain (dBi)
1	AT3216-B2R7HAA	ACX	Ceramic	0.5

### 14.1 Documentation Requirements

In order to ensure regulatory compliance, when integrating the BT800 into a host device, it is necessary to meet the documentation requirements set forth by the applicable regulatory agencies. The following sections (FCC, Industry Canada, and European Union) outline the information that may be included in the user's guide and external labels for the host devices into which the BT800 is integrated.

#### FCC

**Note:** You must place "Contains FCC ID: SQG-BT800" on the host product in such a location that it can be seen by an operator at the time of purchase.

#### User's Guide Requirements

The BT800 complies with FCC Part 15 Rules for a Modular Approval. To leverage Laird's grant, the conditions below must be met for the host device into which the BT800 is integrated:

- The transmitter module is not co-located with any other transmitter or antenna that is capable of simultaneous operation.

As long as the conditions above are met, further transmitter testing is typically not required. However, the OEM integrator is still responsible for testing its end-product for any additional compliance requirements required with this module installed, such as (but not limited to) digital device emissions and PC peripheral requirements.

#### IMPORTANT:

In the event that the conditions above cannot be met (for example certain device configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID cannot be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

When using Laird's FCC grant for the BT800, the integrator must include specific information in the user's guide for the device into which the BT800 is integrated. The integrator must not provide information to the end user regarding how to install or remove this RF module in the user's manual of the device into which the BT800 is integrated. The following FCC statements must be added in their entirety and without modification into a prominent place in the user's guide for the device into which the BT800 is integrated:

---

**IMPORTANT NOTE:** To comply with FCC requirements, the BT800 must not be co-located or operating in conjunction with any other antenna or transmitter.

---

### ***Federal Communication Commission Interference Statement***

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT NOTE:** FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

### **Industry Canada**

---

**Note:** You must place "Contains IC ID: 3147A-BT800" on the host product in such a location that it can be seen by an operator at the time of purchase.

---

### ***RF Radiation Hazard Warning***

Using higher gain antennas and types of antennas not certified for use with this product is not allowed. The device shall not be co-located with another transmitter.

Cet avertissement de sécurité est conforme aux limites d'exposition définies par la norme CNR-102 relative aux fréquences radio.

This radio transmitter (Contains IC ID: 3147A-BT800) has been approved by Industry Canada to operate with the antenna types listed in table above with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (Contains IC ID: 3147A-BT800) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.



Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## 15 EUROPEAN UNION REGULATORY

The BT800 has been tested for compliance with relevant standards for the EU market. BT800 module was tested with a 0.5 dBi chip antenna.

The OEM should consult with a qualified test house before entering their device into an EU member country to make sure all regulatory requirements have been met for their complete device.

Reference the Declaration of Conformities listed below for a full list of the standards that the modules were tested to. Test reports are available upon request.

## 16 EU DECLARATIONS OF CONFORMITY

### 16.1 BT800 / BT820


<b>Manufacturer:</b>	<b>Laird</b>
<b>Product:</b>	<b>BT800 / BT820</b>
<b>EU Directive:</b>	<b>RTTE 1995/5/EC</b>
<b>Conformity Assessment:</b>	<b>Annex IV</b>

Reference standards used for presumption of conformity:

<b>Article Number</b>	<b>Requirement</b>	<b>Reference standard(s)</b>
<b>3.1a</b>	<b>Health and Safety</b>	<b>EN60950-1:2006+A11:2009+A1:2010+A12:2011</b>
<b>3.1b</b>	<b>Protection requirements with respect to electromagnetic compatibility</b>	<b>EN 301 489-1 V1.9.2 (2011-09)</b> <b>EN 301 489-17 V2.2.1 (2012-09)</b> <b>Emissions:</b> <b>EN55022:2006/A1:2007 (Class B)</b> <b>Immunity:</b> <b>EN61000-4-2:2009</b> <b>EN61000-4-3:2006/A1:2008/A2:2010</b>
<b>3.2</b>	<b>Means of the efficient use of the radio frequency spectrum</b>	<b>EN 300 328 V1.8.1 (2012-06)</b>

Declaration:

We, Laird, declare under our sole responsibility that the essential radio test suites have been carried out and that the above product to which this declaration relates is in conformity with all the applicable essential requirements of Article 3 of the EU Directive 1999/5/EC, when used for its intended purpose.

<b>Place of Issue:</b>	<b>Laird</b> <b>Saturn House, Mercury Park</b> <b>Wooburn Green</b> <b>HP100HH,</b> <b>United Kingdom</b> <b>tel: +44 (0)1628 858 940</b> <b>fax: +44 (0)1628 528 382</b>
<b>Date of Issue:</b>	<b>July 2013</b>
<b>Name of Authorized Person:</b>	<b>Andrew Dobbing, Engineering Manager</b>
<b>Signature:</b>	

## 17 ORDERING INFORMATION

Part Number	Description
BT800	BTv4.0 Dual Mode USB HCI Module
BT820	BTv4.0 Dual Mode USB Dongle
DVK-BT800	Development Kit for BT800 Module

### 17.1 General Comments

This is a preliminary datasheet. Please check with Laird for the latest information before commencing a design. If in doubt, ask.

## 18 BLUETOOTH SIG APPROVALS

### 18.1 Application Note: Subsystem Combinations


This application note covers the procedure for generating a new EPL (End Product Listing) on the Bluetooth SIG website. In the instance of subsystems, a member can combine two or more subsystems to create a complete Bluetooth End Product.

#### BT800 Series Subsystem Listings

Design Name	Owner	QDID number	Link to listing on the SIG website
BT800 / BT810 / BT820	Laird	B021369	<a href="https://www.bluetooth.org/tpg/QLI_viewQDL.cfm?qid=21369">https://www.bluetooth.org/tpg/QLI_viewQDL.cfm?qid=21369</a>

#### Assumptions

This procedure assumes that the member is simply combining two or more subsystems to create a complete End Product. This is achieved by using the EPL (End Product Listing) interface on the Bluetooth SIG website. [Figure 1](#) shows the basic subsystem combination of a controller and host subsystem. The Controller provides the physical layers and protocol layers below HCI, with the Host providing the protocols/profiles above HCI. The member may also combine a Profile Subsystem to provide more profile coverage if required.

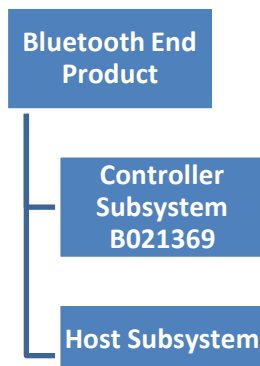

*Figure 23: Basic subsystem combination of controller and host*

The following link provides an overview of the EPL system:

<https://www.bluetooth.org/technical/qualification/eploverview.htm>

For a detailed procedure of how to make an EPL entry, please refer to the following SIG document:

[https://www.bluetooth.org/docman/handlers/DownloadDoc.ashx?doc\\_id=71880](https://www.bluetooth.org/docman/handlers/DownloadDoc.ashx?doc_id=71880)

In the case of the Laird BT800, please search for QDID B021369 in step 4 and then create a new EPL (step 5). Under step 7, enter the QDID(s) of the subsystems to be combined in the **Link additional QDLs** box.

---

**Note:** Alternatively the member can choose to have a new QDID for the subsystem combination. However, it should be noted that this would incur a listing fee and require the subsystem combination to be assessed against the latest qualification requirements.

---

## 18.2 Useful FAQ links

[https://www.bluetooth.org/ticketing/view\\_article.cfm?action=article\\_comment&aid=284](https://www.bluetooth.org/ticketing/view_article.cfm?action=article_comment&aid=284)

[https://www.bluetooth.org/ticketing/view\\_article.cfm?action=article\\_comment&aid=300](https://www.bluetooth.org/ticketing/view_article.cfm?action=article_comment&aid=300)

[https://www.bluetooth.org/ticketing/view\\_article.cfm?action=article\\_comment&aid=140](https://www.bluetooth.org/ticketing/view_article.cfm?action=article_comment&aid=140)

## 18.3 Additional Assistance

Please contact your local sales representative for further assistance:

Laird Technologies

wirelessinfo@lairdtech.com

**Americas :** +1-800-492-2320 Option 2

**Europe:** +44-1628-858-940

**Hong Kong:** +852-2923-0610

Copyright © 2013 Laird Technologies, Inc. All rights reserved.

The information contained in this manual and the accompanying software programs are copyrighted and all rights are reserved by Laird Technologies, Inc. Laird Technologies, Inc. reserves the right to make periodic modifications of this product without obligation to notify any person or entity of such revision. Copying, duplicating, selling, or otherwise distributing any part of this product or accompanying documentation/software without the prior consent of an authorized representative of Laird Technologies, Inc. is strictly prohibited. All brands and product names in this publication are registered trademarks or trademarks of their respective holders.

This material is preliminary Information furnished by Laird Technologies in this specification is believed to be accurate. Devices sold by Laird Technologies are covered by the warranty and patent indemnification provisions appearing in its Terms of Sale only. Laird Technologies makes no warranty, express, statutory, and implied or by description, regarding the information set forth herein. Laird Technologies reserves the right to change specifications at any time and without notice. Laird Technologies' products are intended for use in normal commercial and industrial applications. Applications requiring unusual environmental requirements such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional testing for such application.

Limited Warranty, Disclaimer, Limitation of Liability